


XTAR[®]

D06

LED Diving Flashlight

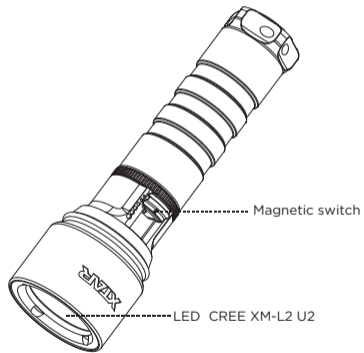

Introduction

XTAR D06 is a professional diving flashlight with super brightness. Light up the ocean with adjusting brightness at your will. Dive free in the sea with one-hand controlled easy operation. Explore the darkness in 100m deep underwater or on land.

Technical Parameter

| | |
|------------------|--|
| ANSI | High ←————→ Low |
| Luminance | 900lm ←————→ 3 lm |
| Runtime | 3 hrs ←————→ 325 hrs |
| Beam Throw | 306m |
| Max Intensity | 23500CD |
| Impact Resistant | 1.5m |
| Waterproof | Diving depth 100m |
| Size | Ø 45mm(head dia) x Ø 30 (body dia) x148.5mm(length) |
| Net weight | 210g (Battery excluded) |

Note

1. Above-mentioned parameters (tested by using XTAR 18650 3100mAh) are approximate and may differ depending on battery and environment.
2. Working Voltage: 2.65-4.2V.

XTAR[®]

Shenzhen XTAR Electronics Co., Ltd
5th Floor, No.77 Xinhe Rd, Shangmugu, Pinghu Area,
Longgang District, Shenzhen, Guangdong, China
Tel/Fax: (+86)755-25507076 E-mail: info@xtar.cc
Zip Code: 518111 Website: www.xtar.cc

Operation

1. Install battery.
Unscrew flashlight, and install the battery with positive pole (+) towards head.
2. Choose brightness.
Move switch forward or backward to adjust brightness.

3

Tip

1. Please make sure positive pole (+) towards the head.
2. Considering flashlight consumes power when it is off, please unscrew tail and move switch to bottom.
3. To avoid top lightness will be influenced or LED flashes, and please move the switch equally.
4. Do not wipe the battery with strong corrosive substance.
5. Flashlight fails to operate.

| Possible Reasons | Solutions |
|--|--|
| Battery is exhausted or not compatible | Change battery |
| Battery is installed incorrectly | Make sure positive pole toward the head |
| Poor contact | <ol style="list-style-type: none">1. Clean the contact surface of battery with alcohol2. Tighten the head or tail cap |

6. For more and updated information, please visit www.xtar.cc

4

Customer service

Please provide warranty number and receipt to dealer to get after-sales service.

- 15 days free replacement.
- 24 months free repair. If problems develop beyond 24 months, we will offer free repair service but charge for parts used. The distributor will inform you material fee or related freight if any before repair.
- Lifetime technical support.

Note

1. Damage caused by misuse or intentional force is not covered by the warranty.
2. You are recommended to store warranty info online: register and login www.xtar.cc - Member Center - Warranty Information.
3. Warranty number can be found on the package or product.

Global After-sales Email: service@xtar.cc

US After-sales Email: serviceus@xtar.cc

5

Anti-fake inquiry

1. Scratch the anti-counterfeiting label on the package to get 18-digit number.
2. Input the number into the query page on www.xtar.cc (Contact Us - Anti-fake).



Warning: Do not radiate the light directly towards the eyes, serious injury or blindness could occur by misuse.

6